


For your Hedler light unit you have bought a QuickFit - retrofit set. This new adapter allows to attach/detach all the latest Hedler folding reflectors and the Hedler 4-Leaf Barndoor by using a spring bearing click-secure mechanism extremely fast to the Hedler light units of the Hs-, H-, D- and F-range. Latest version Hedler reflectors will be attached and secured (by an anticlockwise turn) in the known way. Thank you for choosing a Hedler product and your confidence in the Hedler light system. Please, read the following technical information and instructions carefully before using the Hedler QuickFit.

HEDLER QuickFit - Retrofit set

The new HEDLER QuickFit - which allows very fast attachment/detachment of all the latest Hedler (folding) reflectors - will be delivered as a retrofit set with all the needed assembly tools. It has to be mounted to your Hedler light unit once, the following instructions describe the necessary steps. Please, note carefully the single advices and check the correct function of your HEDLER QuickFit after assembling.

Assembly instructions

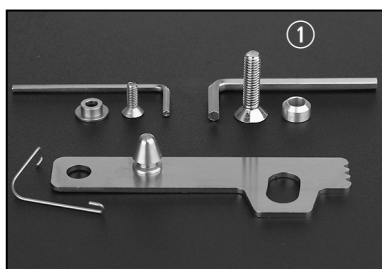

1. HEDLER QuickFit - Retrofit set

Please check by means of the photograph #1 the completeness of your HEDLER QuickFit - Retrofit set



2. Remove the knurled thumb screw, located centred and beneath the light unit's reflector and lamp(s) at the front plate.

This screw will no longer be needed.



3. Remove the socket screw, located on the right hand side and beneath the light unit's reflector and lamp(s) at the front plate.

This screw will no longer be needed.




4. Position the tension spring on the light unit's housing front plate as shown. Please note, that the hook-shaped opening of the tension spring encompasses (from the right side) the safety glass holder as shown.



5. Insert the small socket screw M4x12 into the silver-coloured distance disc.

Now, insert the combination socket screw + distance disk into the QuickFit handle (as shown - photograph 5).

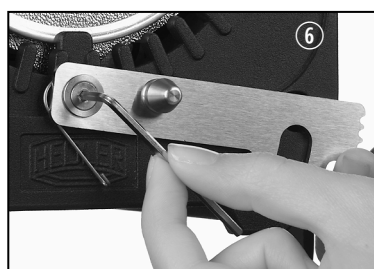

6. Tighten the QuickFit handle under the use of the socket screw + distance disc combination (refer to 5) in the shown position at the front plate.

Please, tighten the screw hand-screwed!



7. Rotate the QuickFit handle anti-clockwise until it's (additionally driving the tension spring) long hole is positioned over the thread of the under point 3 removed screw. In this position, insert the brass bushing into the handle's long hole.



8. Insert the socket screw M6x25 through the brass bushing into the thread and tighten the socket screw hand-screwed.

Please, check the correct function: the QuickFit handle must be automatically moving into it's home position if it's not manually operated.